



# Disassembling Nest Dropcam Pro Outer Case

This is intended to be a Prerequisite Only guide to remove the outer case of the Nest Dropcam Pro.

Written By: David Foens



## INTRODUCTION

Make sure device is unplugged before proceeding. This Prerequisite Only guide is necessary for all replacements.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Outer Case





- Press in the mounting clips on each side of the case to remove the camera from the mount.

## Step 2



- Using a Philips #0 screwdriver, remove the four 3 mm screws.

## Step 3

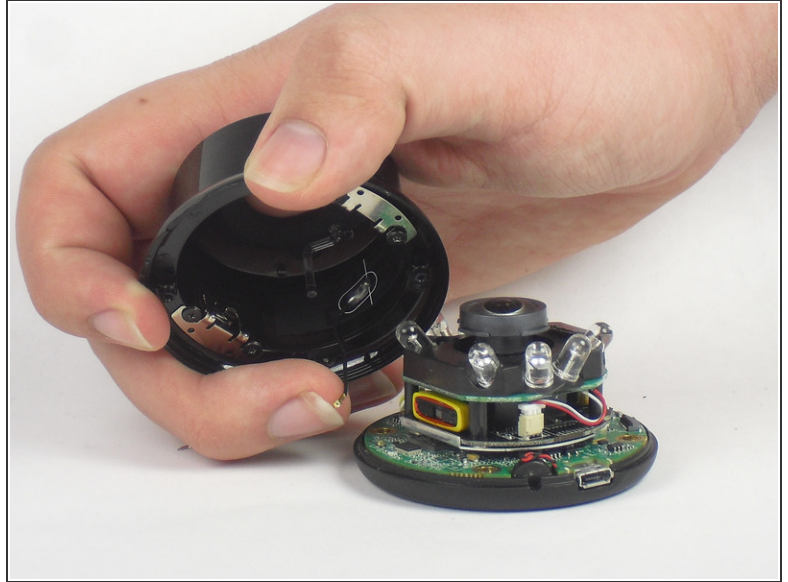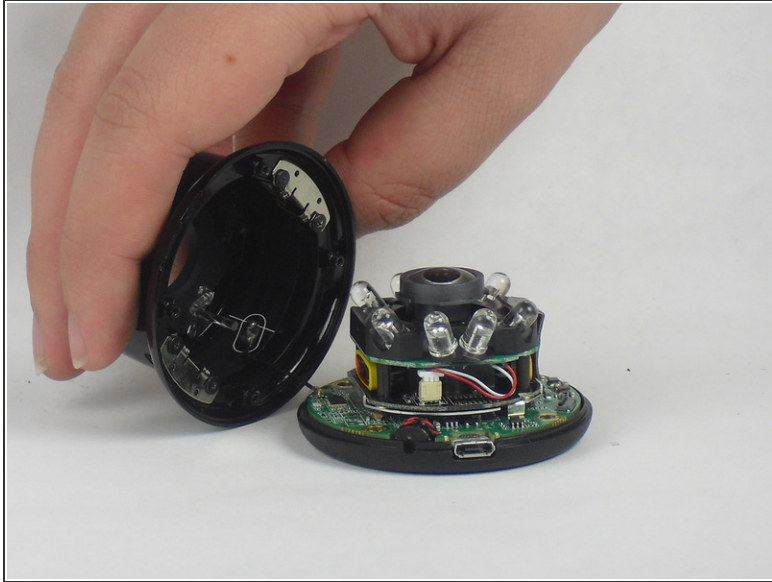

- Lift the front of the case slowly, as there is an antenna cable attached to the motherboard.
- Carefully disconnect the antenna cable from the motherboard. You will feel this cable "pop" out of place when disconnected.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 07:03:04 PM.